Digital output module
Short guide

1. Overview

Digital output module MU110-24.8R is an extension module with 8 digital outputs.

The module provides the following functions:

- connection of actuators with digital outputs
- output control using Modbus network
- pulse width modulation (see 6.3)
- network diagnostic
- fault and alarm signals
- Slave in a Modbus protocol structure.

CAUTION
This device should not be used for medical devices which receive, control or otherwise affect human life or physical health.

2. Specification

Table 1 Specification

Characteristic		Value
Power supply		
Power supply		24 (20 … 28) V DC
Power consumption, max.		6 W
Outputs		
Number of outputs		4
Type		Relays (NO and CO)
Control		On-Off or PWM
Maximum voltage on relay contacts		264 V AC or 30 V DC
Switching capacity		4 A, 250 V AC, cosϕ > 0.4 or 24 V DC
Switching current, min.		100 mA
Service lifetime, mechanical		10,000,000 switches
Service lifetime, electric (changeover contact)	6 A, 30 V DC	10,000 switches
	6 A, 250 V AC	10,000 switches
Service lifetime, electric (NO contact)	6 A, 30 V DC	30,000 switches
	6 A, 250 V AC	30,000 switches
Switching time		15 ms
PWM frequency, max.		1 Hz with 0.05 duty cycle
PWM pulse length, min.		50 ms
Interfaces		
Data transfer interface		RS-485
Baud rate, max.		115.2 kBd
Protocols		akYtec, ModBus-RTU/ ASCII
Galvanic isolation		2300 V
Flash memory overwrites, max.*		10,000
Dimensions		(63 × 110 × 75) ± 1 mm
IP code: Faceplate Terminal block		 IP20 IP00
Average service lifetime		10 years
Weight, max.		500 g

* Flash memory stores configuration parameters.

3. Environmental conditions

Table 2 Environmental conditions

Condition	Permissible range
Ambient temperature	–20 … +55 °C
Transportation and storage	–25 … +55 °C
Relative humidity	up to 80% (at +25 °C, non-condensing)
Altitude	up to 2000 m above sea level

CAUTION
The following environmental conditions must be observed:
- low-dust, dry and controlled environment
- closed explosion-proof rooms without aggressive vapors and gases

4. Settings

The module can be configured with the akYtecToolPro software using a RS485-USB interface adapter (not included).

NOTE
The latest version of the configuration software is available for download on www.akytec.de.

Full list of the parameters is given in *User guide* (available on the device page at www.akytec.de).

5. Installation and connection

Before installation make sure there is enough free space for connecting the module and placing the wires.

The module is designed for DIN rail mounting in a control cabinet or for wall mounting.

CAUTION
Improper installation can cause serious or minor injuries and damage the module.
Installation must be performed only by fully qualified personnel.

Installation of external connections is carried out by a wire with a cross section of not more than 0.75 mm².

Powering any devices from the network contacts of the module is prohibited

The device is powered from a local power supply unit of suitable capacity.

The power supply unit should be installed in the same electrical cabinet in which the device is installed.

CAUTION
All electrical connections must be performed by a fully qualified electrician.
Switch on the power supply only after the wiring of the device has been completely performed.

6. Wiring

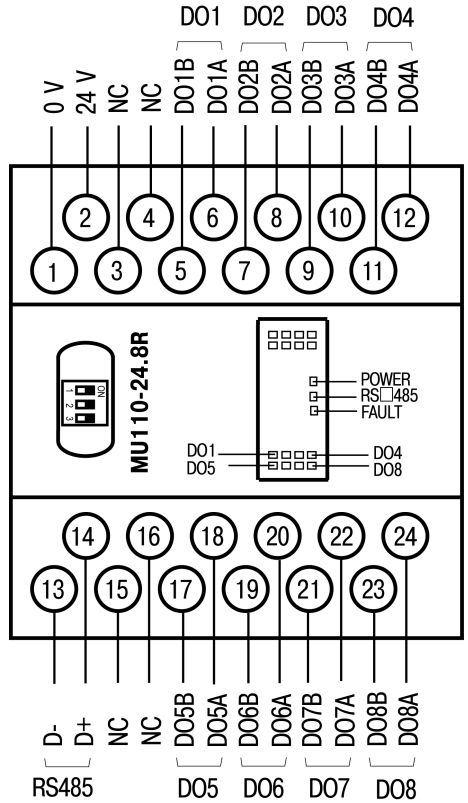


Fig. 1 Electrical connectors

Table 3 Terminal assignment

No.	Description	No.	Description
1	Power supply (0 V)	13	RS-485 (D-)
2	Power supply (24 V)	14	RS-485 (D+)
3	Output 1B (DO1C)	15	Output 5C (DO5A)
4	Output 1A (DO1B)	16	Output 5B (DO5B)
5	Output 1C (DO1C)	17	Output 5A (DO5C)

© All rights reserved. Subject to technical changes and misprints.
akYtec GmbH · Vahrenwalder Str. 269 A · 30179 Hannover · Germany
Tel.: +49 (0) 511 16 59 672-0 · www.akytec.de

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

No.	Description	No.	Description
6	Output 2B (DO2B)	18	Output 6A (DO6A)
7	Output 2A (DO2A)	19	Output 6B (DO6B)
8	Output 3C (DO3C)	20	Output 7A (DO7A)
9	Output 3B (DO3B)	21	Output 7B (DO7B)
10	Output 3A (DO3A)	22	Output 7C (DO7C)
11	Output 4B (DO4B)	23	Output 8A (DO8A)
12	Output 4A (DO4A)	24	Output 8B (DO8B)

Under the cover on the front panel of the module three DIP-switches are located:

- **1** – During normal operation, the switch should be set to OFF position
- **2** – Factory settings restoration
- **3** – Firmware–update

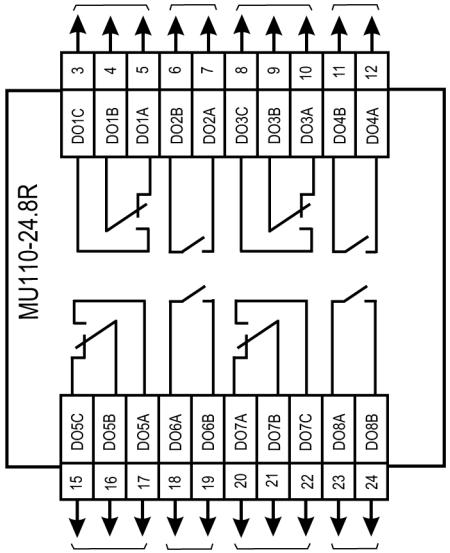


Fig. 2 Output wiring

7. Indication

On the front panel there are indication LEDs.

Table 4 Indication

LED	LED state	Description
OUPUTS 1...8	ON	Output is on
RS-485	Flashing	Data exchange over serial port
POWER	ON	Power supply indicator
FAULT	ON	Data exchange over serial port is interrupted

8. Modbus registers

Table 5 Modbus registers

Parameter	Value (Unit)	Type	Register	
			(Hex)	(Dec)
Duty cycle DO1–DO8	0…1000 (0,1 %)	Uint16	0000–0007	0000–0007
Safe output status DO1–DO8	0…1000 (0,1 %)	Uint16	0010–0017	0016–0023
PWM period DO1–DO8	1…900 s	Uint16	0020–0023	0032–0035
Bit mask of output status	0…255	Uint16	0032	0050
Baud rate	0 – 2,4 (kbit/s); 1 – 4,8 (kbit/s); 2 – 9,6 (kbit/s); 3 – 14,4 (kbit/s); 4 – 19,2 (kbit/s); 5 – 28,8 (kbit/s); 6 – 38,4 (kbit/s); 7 – 57,6 (kbit/s); 8 – 115,2 (kbit/s)	Uint16	0209	0521
Data bits	0 – 7 1 – 8	Uint16	020A	0522
Stop bits	0 – 1 stop bit 1 – 2 stop bits	Uint16	020B	0523
Parity	0 – none 1 – even 2 – odd	Uint16	020C	0524
Response time-out	0…45 (ms)	Uint16	020D	0525
Device address	1…255	Uint16	020F	0527
Network address length	0 – 7 1 – 8	Uint16	0211	0529
Time-out	0…600 s	Uint16	0030	0048
Device name	—	String	F000	61440
Device version	—	String	F010	61456

Writing to the registers is performed with function 16 (0x10), reading — with functions 03 or 04 (the device supports both functions).

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

© All rights reserved. Subject to technical changes and misprints.
akYtec GmbH · Vahrenwalder Str. 269 A · 30179 Hannover · Germany
Tel.: +49 (0) 511 16 59 672-0 · www.akytec.de